Alcatel-Lucent **OmniPCX** *Enterprise*

Alcatel-Lucent IP Touch 4018 Phone
Alcatel-Lucent IP Touch 4008 Phone
Alcatel-Lucent 4019 Digital Phone

Alcatel·Lucent

Introduction

Thank you for choosing a telephone from the IP Touch range manufactured by **Alcatel-Lucent**.
Your IP Touch digital terminal has a new ergonomic layout for more effective communication.

How to use this guide

Lift the receiver.

Hang up.

Numeric keypad.

Means that the function is subject to programming. If necessary, contact your installer.

Means that the function can be accessed by pressing a programmed key - see **Programming the programmable keys**.

Adjustment “reduce”.

Adjustment “increase”.

Loudspeaker, hands free.

Move the navigation key up or down.

To go back one level (press and release) or to return to the welcome page (press and hold) ; during a conversation, can be used to access the different pages (Menu, Perso, etc.) and to return to the telephone screens.

Line key.

Specific key on numeric keypad.

Partial view of display.

Fixed key.

MENU key.

Voice mail access key.

These symbols can be supplemented by small icons or text.

Contents

Getting to know your telephone p.6

1. Using your telephone p.7

1.1 Making a call p.7
1.2 Receiving a call p.7
1.3 Using the telephone in "Hands free" mode p.7
1.4 Activating the loudspeaker during a conversation (receiver lifted) p.7
1.5 Make a call using the personal phone book p.8
1.6 Redialling p.8
1.7 Make a call-back request to a busy number p.8
1.8 Answering an internal call in intercom mode p.8

2. During a conversation p.9

2.1 Making a second call during a conversation p.9
2.2 Answering a second call during a conversation p.9
2.3 Barring the reception of a new call during communication p.9
2.4 Switching between calls (Broker call) p.9
2.5 Transferring a call p.10
2.6 Three-way conference with internal and/or external correspondents (conference) p.10
2.7 Casual conference p.10
2.8 Placing a call on hold (hold) p.10
2.9 Placing an outside call on hold (parking) p.11
2.10 Intrusion into an internal conversation p.11
2.11 Sending DTMF signals p.11
2.12 Mute, so that your correspondent cannot hear you p.11
2.13 Adjust audio volume p.12
2.14 Recording the current conversation p.12
2.15 Signal malicious calls p.12

3. Sharing p.13

3.1 Answering the general bell p.13
3.2 Manager/secretary filtering p.13
3.3 Call pick-up p.13
3.4 Hunting groups p.13
3.5 Calling an internal correspondent on his/her pager p.14
3.6 Answering a call on your pager p.14
3.7 Calling a correspondent on his/her loudspeaker p.14
3.8 Sending a written message to an internal correspondent p.14
3.9 Send a voice message copy p.15
3.10 Sending a recorded message to a number / a distribution list p.15

4. Keep in touch p.16

4.1 Diverting calls to another number (immediate diversion) p.16
4.2 Diverting your calls to your voice message service p.16
4.3 When you return, consult recorded messages p.16
4.4 Forwarding your calls from the receiving terminal (“Follow me”) p.16
4.5 Cancelling all diversions p.17
4.6 Diverting calls when your line is busy (divert if busy) p.17
4.7 Do not disturb p.17
4.8 Leaving a recorded message for internal callers p.17
4.9 Consulting written messages p.17

5. Managing your charges p.18

5.1 Charging your calls directly to business accounts p.18
5.2 Finding out the cost of an outside call made for an internal user from your terminal . . . p.18

6. Programming your telephone p.19

6.1 Initializing your voice mailbox p.19
6.2 Customising your voice greeting p.19
6.3 Modify the password for your phone set p.19
6.4 Modify the password for your voice mailbox p.19
6.5 Configuring the telephone ringer p.20
6.6 Adjusting screen brightness p.20
6.7 Selecting language p.20
6.8 Programming your personal directory p.21
6.9 Programming the programmable keys p.21
6.10 Programming an appointment reminder p.21
6.11 Identify the terminal you are on p.21
6.12 Lock / unlock your telephone p.21
6.13 Call the associated set p.22
6.14 Forward your calls to the associated number p.22
6.15 Modify the associated number p.22
6.16 The Tandem configuration p.22

7. Use the telephone in SIP or 'Safe' mode p.23

7.1 Making a call p.23
7.2 Receiving a call p.24
7.3 Making a second call during a conversation p.24
7.4 Answering a second call during a conversation p.25
7.5 Placing a call on hold (hold) p.25
7.6 Switching between calls (Broker call) p.25
7.7 Transferring a call p.25
7.8 Mute, so that your correspondent cannot hear you p.26
7.9 Adjust audio volume p.26
7.10 Diverting calls to another number (immediate diversion) p.26
7.11 Configuring the telephone ringer p.26
7.12 Adjusting screen brightness p.27
7.13 Selecting language p.27
7.14 Programming your personal directory p.27
7.15 Sending DTMF signals p.28

Guarantee and clauses p.29

Getting to know your telephone

Handset

Navigation

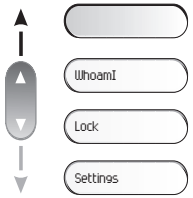

Up-down navigator: used to navigate around the home page, through the menus or in a text zone when entering characters.
The home page consists of:

- information on the status of the set (set locked, call forward, etc.),
- date and time,
- set programming and configuration functions.

Functions accessible (set in idle position):

WhoamI	identify the terminal you are on,
Lock	lock / unlock your telephone,
Forward	divert your calls to another number. (immediate forwarding, forward to voice mail, forward to bleeper),
Settings	configure the set (personal assistant, display, ring tone, voice mail, etc.),
Events	accessing recent calls made and unanswered external calls.

Features accessible in conversation:

Enquiry	calling a second person during a conversation,
Send DTMF	sending DTMF signals,
Record	recording the current conversation,
Forbid camp on	barring the reception of a new call during communication.

Other features can be accessed depending on the configuration of the system.

OK key:used to validate your choices and options while programming or configuring.

Back/Exit key: to return to previous menu (short press) or return to first screen (long press).

Audio keys

Hang-up key: to terminate a call.

Hands-free/Loudspeaker Key:to make or answer a call without lifting the receiver (Alcatel-Lucent IP Touch 4008/4018 Phone).

- Lit in hands-free mode or headset mode (short press).
- Flashing in loudspeaker mode (long press).

Intercom/Mute key:

- during a conversation: press this key so that your correspondent can no longer hear you.
- terminal idle: press this key to answer calls automatically without picking up the receiver (Alcatel-Lucent IP Touch 4008/4018 Phone).

To adjust the loudspeaker or handset volume up or down

Function keys

Messaging key to access various mail services
If the key flashes orange, a new voice message, a new text message or a call-back request has been received.

'Redial' key :

- to access the 'Redial' function (short press)
- call back on the last 8 number dialled (long press).

Function keys and programmable keys

Guide key: use to obtain information on the pre-programmed keys or to access the set programming or configuration.

Phone book key : access your personal directory.

Pre-programmed function keys and programmable key
Lit when the function associated with the key is activated.

1 Using your telephone

1.1 Making a call

dial directly the number for your call | OR | lift the receiver | number required | OR | hands free (Alcatel-Lucent IP Touch 4008/4018 Phone only) | number required

OR programmed line key | during a conversation

To make an external call, dial the outside line access code before dialling your correspondent's number. 9 is the default code for an outside line.

For the operator, dial '0' (by default).

1.2 Receiving a call

lift the receiver | OR | hands free (Alcatel-Lucent IP Touch 4008/4018 Phone only) | OR | press the key for the line that is lit up

1.3 Using the telephone in 'Hands free' mode (Alcatel-Lucent IP Touch 4008/4018 Phone only)

- Terminal idle:

press and release

- Call in progress:

during a conversation | Press and release

During a conversation, you can lift the receiver without terminating the call.

1.4 Activating the loudspeaker during a conversation (receiver lifted) - Loudspeaker

during a conversation | activate loudspeaker (long press)

adjust volume (9 levels) | deactivate loudspeaker (long press)

Press and release the loudspeaker key to switch to hands free mode (light steady) (Alcatel-Lucent IP Touch 4008/4018 Phone).

1.5 Make a call using the personal phone book

press and release | press the programmed key directly (0 to 9) | select the contact to call | start the call

1.6 Redialling

- Redialling the last number dialled (redial):

'Redial' key (short press) → **last number redial**

- Call back on the last 8 number dialled:

'Redial' key (long press)

select the No. in the last ten issued | start the call

1.7 Make a call-back request to a busy number

1.8 Answering an internal call in intercom mode (Alcatel-Lucent IP Touch 4008/4018 Phone only)

You can answer without lifting the receiver. When you receive an internal call, your telephone rings and you are connected directly in hands free mode. The screen shows the caller's identity.

- **To activate - Terminal idle:**

corresponding LED lights up

When your caller hangs up, intercom mode remains active.

- **To deactivate - Terminal idle:**

The corresponding LED goes out

2 During a conversation

2.1 Making a second call during a conversation



during a conversation — number of second correspondent



- **Other methods for calling a second correspondent**

Call back on the last 8 number dialled (long press).

Calling from your personal directory (PersSpDial).

Programmed line key.

- **To cancel your second call and recover the first:**

during a conversation — key for the line whose light is flashing

If you make an error, hang up: your telephone will ring and you will recover your first call.

2.2 Answering a second call during a conversation

- **A second correspondent is trying to call you:**

during a conversation — name or no. of the caller displayed for 3 seconds — light flashes

Answer call displayed :

line key for which icon is flashing

- **To return to your first caller and end the conversation in progress**

during a conversation — key for the line whose light is flashing

2.3 Barring the reception of a new call during communication

During communication, you do not want to be called by another caller:



to bar or authorize new calls during communication

2.4 Switching between calls (Broker call)

During a conversation, a second call is on hold.
To accept the second call:

light flashes

2.5 Transferring a call

- **To transfer your call to another number:**

during a conversation — no. of the 2nd terminal

- **If the number receiving the transfer answers:**

Transfer between two outside calls is not generally possible (depends on country concerned and system configuration).

2.6 Three-way conference with internal and/or external correspondents (conference)

- During a conversation, a second call is on hold:

during a conversation

- Cancel conference and return to first correspondent:



- After the conference, to leave your two correspondents talking together:

hang up

2.7 Casual conference

During a 3-way conference, you can add up to three additional participants.

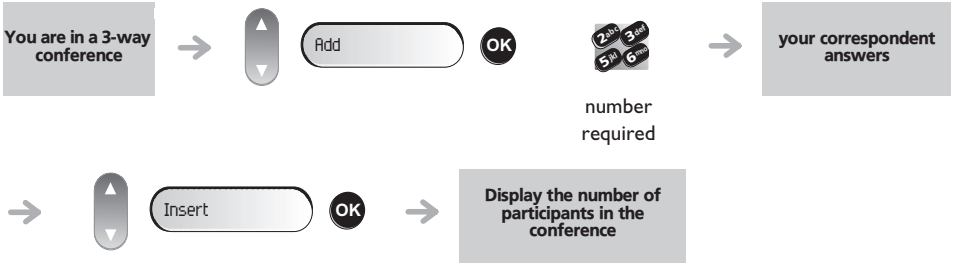

number required

2.8 Placing a call on hold (hold)

- **Exclusive hold:**

During a conversation, you wish to place the call on hold and recover it later, on the same telephone.

during a conversation — press the key for the line that is lit up (Call in progress)

- **Recover the call on hold:**

key for the line whose light is flashing — during a conversation

2.9 Placing an outside call on hold (parking)

Park/retrieve call

You can place an outside call on hold and recover the call on another telephone:

John 02:15 → ▲▼ Park the call OK

during a conversation

2abc 3def 5jkl 6mno

enter the number of the telephone on which you want to resume the conversation

Your correspondent is parked and hears the hold melody.

- **To recover the parked call:**

Park/retrieve call

▲▼ Settings OK Services OK Consultation OK

Call pick up OK Park/retrieve OK Consultation OK

If the parked call is not recovered within a preset time (default value 1 min 30), it is transferred to the operator.

2.10 Intrusion into an internal conversation

Your correspondent's line is busy. If the number is not "protected" and if authorised, you can intrude into the call:

▲▼ Intrusion OK

- **Protection against intrusion:**

Intrusion protection

▲▼ Settings OK Services OK Consultation OK

Additional services OK Intrusion protect OK Intrusion OK

twice

2abc 3def 5jkl 6mno

enter the number

Protection is cancelled when you hang up.

2.11 Sending DTMF signals

During a conversation you sometimes have to send DTMF signals, such as with a voice server, an automated attendant or a remotely consulted answering machine.

John 02:15 → ▲▼ Send DTMF OK

during a conversation

to activate

The function is automatically cancelled when you hang up.

2.12 Mute, so that your correspondent cannot hear you

You can hear your correspondent but he/she cannot hear you:

during a conversation → disable microphone → **the button flashes on and off**

resume the conversation → **The key is no longer lit**

2.13 Adjust audio volume

During a call, to adjust the volume level of the loudspeaker or receiver:

Adjust audio volume

2.14 Recording the current conversation

To record the conversation during communication:

to start recording to stop the recording

At the start or end of recording, your correspondent hears a beep.

2.15 Signal malicious calls



This key lets you signal a malicious call. If this call has an internal source, it is signalled to the system by a special message.

3 Sharing

3.1 Answering the general bell

Night service call pick up

When the operator is absent, outside calls to the operator are indicated by a general bell. To answer:

Settings OK Services OK Consultation OK

Call pick up OK Night call pick up OK

3.2 Manager/secretary filtering

Screened List :

System configuration allows "manager/secretary" groups to be formed, so that the manager's calls can be directed to one or more secretaries.

- **From the manager's or secretary's telephone:**



"Filter" programmed key

"Filter" programmed key

'secretary' call key (when there are several secretaries)

same key to cancel

Filtering is indicated on the manager's telephone by the icon corresponding to the "filtering" programmed key.

3.3 Call pick-up

You hear a telephone ringing in an office where no-one can answer. If authorised, you can answer the call on your own telephone.

- **If the telephone ringing is in your own pick-up group:**

Group call pick up

Settings OK Services OK Consultation OK

Call pick up OK ProcessGrp pick up OK

- **If the telephone ringing is not in your pick-up group:**

Individual call pick up

Settings OK Services OK Consultation OK

Call pick up OK Set call pick up OK

number of telephone ringing

The system can be configured to prevent call pick-up on certain telephones.

3.4 Hunting groups

- **Hunting group call:**

Certain numbers can form a hunting group and can be called by dialling the group number.

Group No.

• **Temporary exit from your hunting group:**

Go out of hunting group

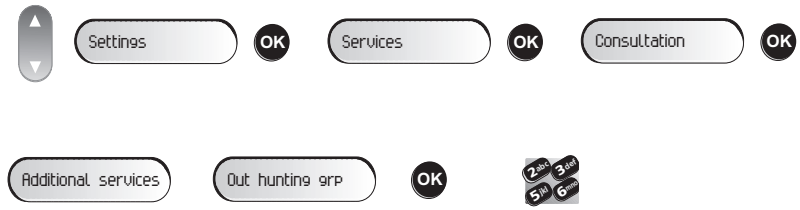

your group number

• **Return into your group:**

Go into hunting group

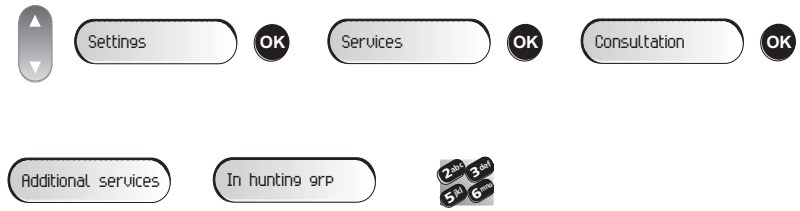

your group number

Belonging to a group does not affect the management of direct calls. A specific telephone within a group can always be called by using its own number.

3.5 Calling an internal correspondent on his/her pager

The number called does not answer and you know that the person called has a pager:

your correspondent does not reply →

'paging'
programmed key

→ **paging in progress is displayed**

Your correspondent can answer from any telephone in the system.

3.6 Answering a call on your pager

Paging answer

A call on your pager can be answered from any telephone within the system.

your pager beeps →

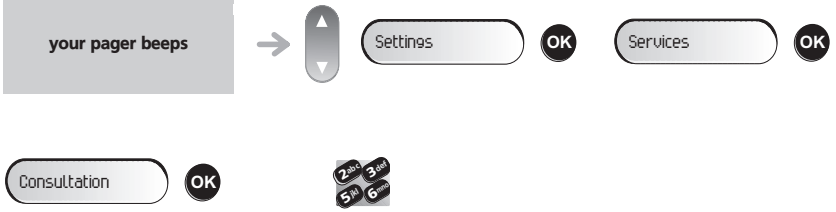

your group number

3.7 Calling a correspondent on his/her loudspeaker

Your internal correspondent does not answer. If authorised, you can remotely activate your correspondent's phone:

your correspondent does not reply →

→ **you are connected to the loudspeaker on your correspondent's phone (if he/she has the hands free function)**

3.8 Sending a written message to an internal correspondent

number to be called

• **Predefined message:**

select the message to be sent

send message

- **Message to complete:**

select the message to complete — Complete the message — send message

3.9 Send a voice message copy

personal code



end of recording — enter the destination voicemail number

spell the addressee's name — send message

3.10 Sending a recorded message to a number / a distribution list

personal code

end of recording — enter the destination voicemail number

spell the addressee's name — options — send message

- **During the recording, you can:**

Rewind	OK	play back the message from the start,
Backward	OK	listen to the end of the message,
Pause	OK	stop recording momentarily,
End	OK	end of recording.

* Options: used to assign transmission options (confidential, urgent, confirmation, etc.).

4 Keep in touch

4.1 Diverting calls to another number (immediate diversion)

The number can be your home, portable or car phone, voice message or an internal extension (operator, etc.).

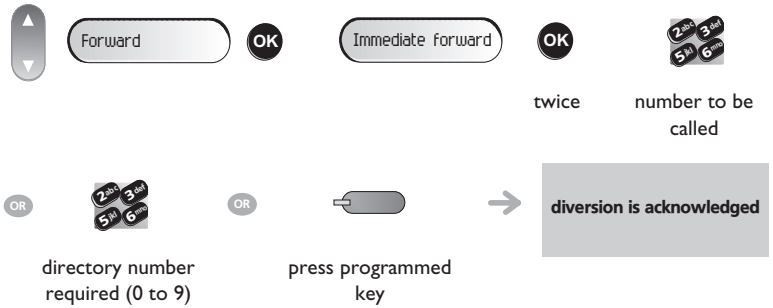

You can make calls, but only the destination number can call you.

4.2 Diverting your calls to your voice message service

4.3 When you return, consult recorded messages

The light indicates that messages have been received.

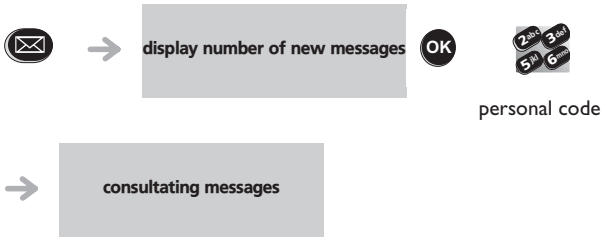

- **While listening to messages, you can:**

Rewind	OK	play back the message from the start,
Backward	OK	listen to the end of the message,
Pause	OK	Pause while listening to the message,
Forward	OK	enter the voicemail number,
End of message	OK	terminate consultation.

- **After consulting the message, you can:**

Exit	OK	play back the message from the start,
Erase	OK	erase message,
Call back	OK	call back sender of message,
Save	OK	save the message,
Replay	OK	listen to message,
Forward message	OK	Send a copy of a message.

4.4 Forwarding your calls from the receiving terminal ("Follow me")

Remote forward

You wish to receive your calls in your present location:
Use the "Follow me" function.

4.5 Cancelling all diversions

Forward → OK → Deactivate forward → OK

twice

4.6 Diverting calls when your line is busy (divert if busy)

Forward on busy

Forward → OK → Forward on busy → OK → number receiving diversion

twice

→ **diversion is acknowledged**

4.7 Do not disturb

Do not disturb on/off

You can make your terminal temporarily unavailable for all calls.

Settings → OK → Services → OK → Consultation → OK

Don't disturb-Lock → OK → Do not disturb → OK → personal code → **diversion is acknowledged**

Callers wishing to contact you will see the 'Do Not Disturb' message displayed on their sets when they try to call.

4.8 Leaving a recorded message for internal callers

You can leave a message on your terminal which will be displayed on the screen of the terminal calling you.

new text message → OK → Forward to text → OK

→ Predefined message → OK — select a predefined message

OR Msg to complete — select a predefined message to complete

OK — twice

complete your message

4.9 Consulting written messages

The light indicates that messages have been received.

new text message → OK → **display number of new messages**

Read message → OK → **display name of sender, with date, time and ranking of message** → OK — read the message

After consulting the message, you can:

- Delete → OK — delete the message,
- Recall → OK — call back sender of message,
- Text answer → OK — forward a message to the message originator,
- terminate consultation.

5 Managing your charges

5.1 Charging your calls directly to business accounts

You can charge the cost of your outside calls to business account numbers.

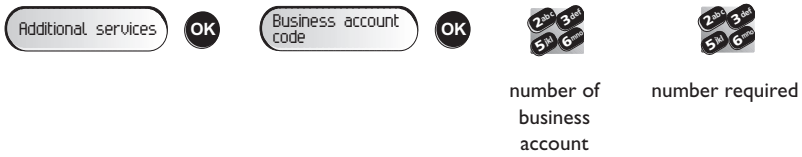

5.2 Finding out the cost of an outside call made for an internal user from your terminal

6 Programming your telephone

6.1 Initializing your voice mailbox

light flashes → enter your personal code then record your name according to voice guide instructions

6.2 Customising your voice greeting

You can replace the greeting message by a personal message

Voice mail OK → personal code → Perso options OK

Greeting message OK → Perso greeting OK

→ Normal prompt OK — to return to the default message

OR Perso greeting OK — recording

End OK — end of recording

→ Accept OK — apply

OR Restart OK — re-record a message

OR Replay OK — replay message

6.3 Modify the password for your phone set

Settings OK → Phone OK → Password OK

old code (4 digits) OK → new code (4 digits) OK → enter new password again to confirm OK

This code acts as a password controlling access to programming functions and the user 'Set Locking ' function (code by default: 0000).

6.4 Modify the password for your voice mailbox

Voice mail OK → personal code → Perso options OK

Admin options OK → Genrl admin OK → My password OK

new code (4 digits) #

As long as your voice mailbox has not been initialized, personal code is 0000.

6.5 Configuring the telephone ringer

▼ Choose the tune:



select the type of call to which the ringing is to be associated

select the melody of your choice (16 tunes)

apply your choice

▼ Adjusting the ringer volume:

select the volume of your choice (12 levels)

apply your choice

▼ Activate/disable meeting mode (progressive ringing):



apply your choice

▼ Activate/deactivate discreet ring mode:





apply your choice

▼ Adjust ringer volume while a call arrives:

adjusting the ringer volume

6.6 Adjusting screen brightness

adjusting screen brightness

adjusting screen brightness

6.7 Selecting language

select the language of your choice

apply your choice

6.8 Programming your personal directory

press and release — enter the number



select an empty entry in the directory — modify the associated number — enter the number

6.9 Programming the programmable keys



press a key to program

6.10 Programming an appointment reminder

You can define the time of a temporary reminder (one in 24 hours) or a permanent reminder (every day at the same time).

- **Program a temporary reminder call:**

twice — enter time of appointment

- **At the programmed time, your telephone rings:**

If you are in conversation, the display flashes and an audio tone is generated. After three calls without reply, a temporary request is cancelled but a permanent request remains in memory.

If your calls are diverted to another terminal, the diversion is not applied to the reminder call.

6.11 Identify the terminal you are on



6.12 Lock / unlock your telephone

enter your personal password

6.13 Call the associated set

The number of another set can be associated with your set number (see Modify the associated number).
To call it:

start the call

6.14 Forward your calls to the associated number

If you have previously defined an associated number, you can forward your calls to this number.

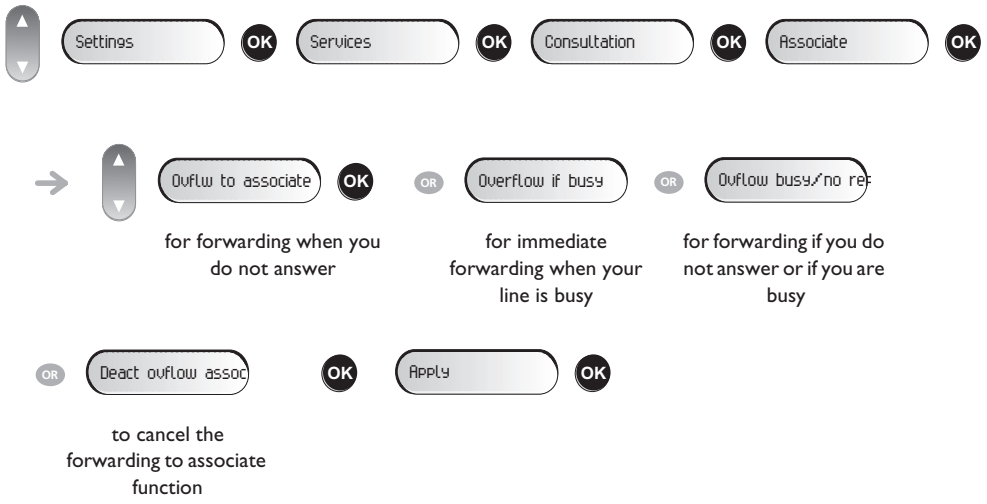

for forwarding when you do not answer

for immediate forwarding when your line is busy

for forwarding if you do not answer or if you are busy

to cancel the forwarding to associate function

6.15 Modify the associated number

The associated number can be a phone set number, the voice mail number or the pager number.

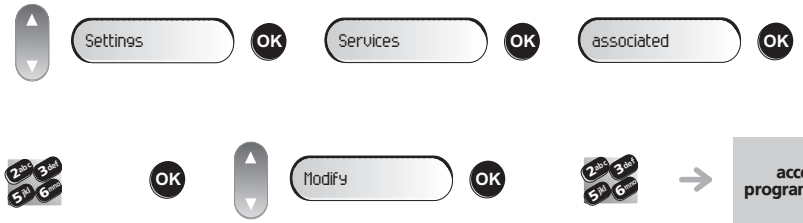

enter your personal password

enter the new associated number

6.16 The Tandem configuration

This configuration lets you group two sets under a single call number. Your set is then the main set and the second set, usually a DECT set, is the secondary set. Each set has its own directory number, but the tandem number is that of the main set. When you receive a call, the two sets ring simultaneously. When one of the sets answers, the other set stops ringing. When all the lines of the main set are busy, the secondary (DECT) set does not ring. The secondary set can still be called by its own number, but in this case, the tandem function will no longer be taken into account. Most of the functions are common to the two sets, for example: forwarding, meet-me reminder, the various messages, etc., while others are specific to each set, for example: individual directory, last number redial, out of service, set padlock, etc.
For more information regarding this configuration, contact the person in charge of your installation.

7 Use the telephone in SIP or 'Safe' mode

Your telephone is compliant with the SIP standard and can be used in simplified mode in a SIP environment.
According to the configuration the telephone system of your company, your phone set can automatically switch to 'safe' mode in case of loss of connection with the system, in order to ensure continuity of service. Then, your telephone is running in SIP mode until the connection with the telephone system of your company is re-established. You can acces the main functions of your telephone.
In SIP mode, each telephone is identified by a character string called the URI. Within your company, the URI of your correspondent is usually the correspondents telephone number.
For more information, contact your installer or administrator.

The SIP mode is only available for 8 Extended Edition Series

Pre-programmed function keys are disabled in SIP mode

7.1 Making a call

▼ Seizing the line:

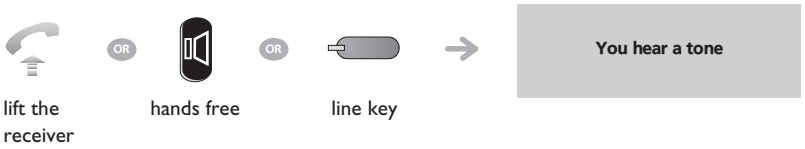

▼ Call by dialing the internal number of your correspondent:

▼ Call using your correspondents URI:

enter the text: the number pad keys have letters that you can display by successive presses. Some special characters can be displayed by successively pressing the * key (+% $ / & ( ) [ ] =) or # key (@) or 0 key (, , : ' ? !) or 1 key (- _).

In SIP mode, each telephone is identified by a character string called the URI. Within your company, the URI of your correspondent is usually the correspondents telephone number.

▼ Make a call using the personal phone book (1):

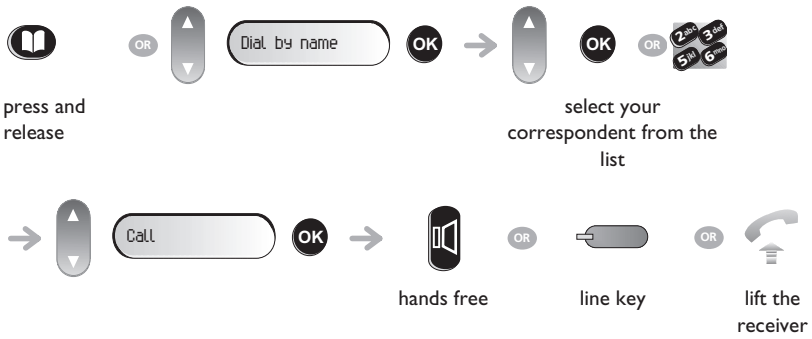

▼ Make a call using the personal phone book (2):

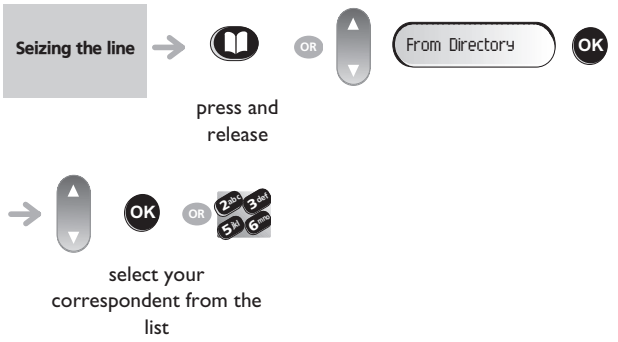

Redialling the last number dialled (redial):

'Redial' key
(short press)

7.2 Receiving a call

Another call is received.

Stop the ringer:

once

Reject the call displayed:

twice

Answer the call:



lift the receiver | hands free | line key

7.3 Making a second call during a conversation

You are in communication with a first correspondent.

free line key

number of second correspondent | call using your correspondents URI | calling from your personal directory (PersSpDial)

redialling the last number dialled (redial) | Hang up the ongoing call

enter the text: the number pad keys have letters that you can display by successive presses. Some special characters can be displayed by successively pressing the * key (+% $ / & ( ) [ ] =) or # key (@) or 0 key (, , : ' ? !) or 1 key (- _).

In SIP mode, each telephone is identified by a character string called the URI. Within your company, the URI of your correspondent is usually the correspondents telephone number.

To cancel your second call and recover the first:

hang up the ongoing call | key for the line whose light is flashing

7.4 Answering a second call during a conversation

You are in communication with a first correspondent.

- **A second correspondent is trying to call you:**

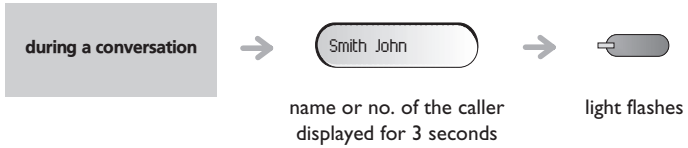

- **Answer call displayed:**

- **To return to your first caller and end the conversation in progress:**

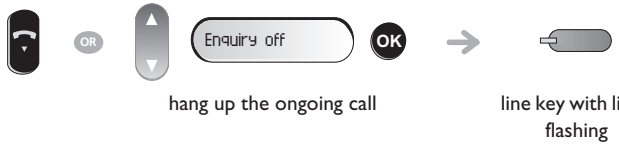

7.5 Placing a call on hold (hold)

- **Retrieve the correspondent on hold:**

7.6 Switching between calls (Broker call)

You are in communication with a first correspondent. A second correspondent is on hold.
To accept the second call:

7.7 Transferring a call

▼ You are in communication with a first correspondent.

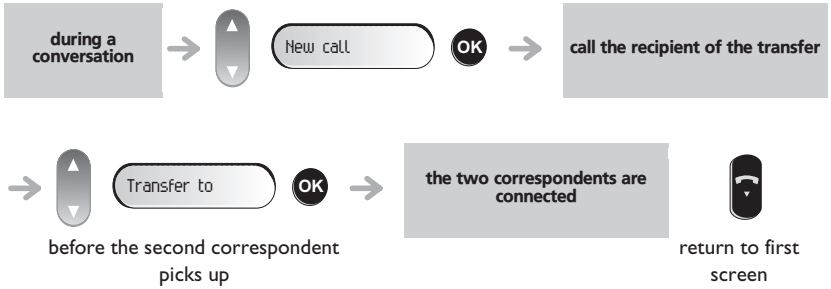

▼ You are in communication with two correspondents.

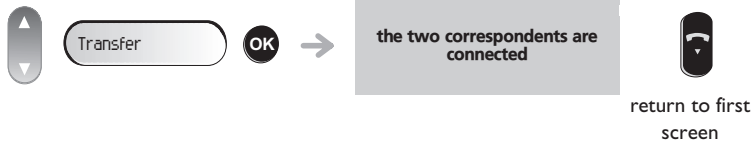

▼ You are in communication with a first correspondent. A second correspondent is on hold. You want to transfer the ongoing call to a 3rd correspondent.

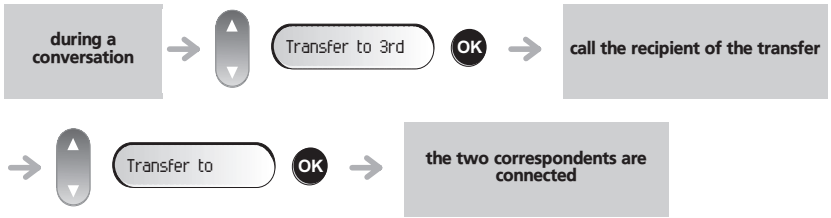

Recover the correspondent on hold :

line key with light flashing

7.8 Mute, so that your correspondent cannot hear you

You can hear your correspondent but he/she cannot hear you:

disable microphone

resume the conversation

7.9 Adjust audio volume

During a call, to adjust the volume level of the loudspeaker or receiver:

adjust audio volume

7.10 Diverting calls to another number (immediate diversion)

call the recipient of the forwarding

validate the forwarding

return to first screen

You can make calls, but only the destination number can call you.

Modify the forwarding:

call the new recipient of the forwarding

save the modification

return to first screen

Cancel the forwarding:

Return to first screen

7.11 Configuring the telephone ringer

Choose the tune:

select the melody of your choice (16 tunes)

return to first screen

Adjusting the ringer volume:

select the volume of your choice (9 levels)

apply your choice

return to first screen

Activate/disable meeting mode (progressive ringing):

apply your choice

Activate/deactivate discreet ring mode:

apply your choice

Adjust ringer volume while a call arrives:

adjusting the ringer volume

7.12 Adjusting screen brightness

adjusting screen brightness

adjusting screen brightness

7.13 Selecting language

select the language of your choice

apply your choice

7.14 Programming your personal directory

Access your personal directory:

press and release

Create a record in the personal phone book:

name, first name and number of your contact

save the record | cancel the creation | return to first screen

Modifying a card in the personal directory:

select the card to be modified

name, first name and number of your contact

save the modification | cancel the modification | return to first screen

*enter the text: the number pad keys have letters that you can display by successive presses. Some special characters can be displayed by successively pressing the * key (+% $ / & ( ) [ ] =) or # key (@) or 0 key (, ' : " ? !) or 1 key (- _).*

Delete a record:

select the card to be deleted | return to first screen

7.15 Sending DTMF signals

During a conversation you sometimes have to send DTMF signals, such as with a voice server, an automated attendant or a remotely consulted answering machine.
By default during a communication, your telephone in SIP mode is configured to send codes in voice frequency: enter these codes directly using the keys on your telephone
For more information regarding this configuration, contact the person in charge of your installation.

Guarantee and clauses

Independently of the legal warranty that covers this appliance, it is guaranteed for 1 year, parts and labour, counting from the date indicated on your invoice.
The invoice will be demanded if making a claim under the warranty. The warranty does not however apply in the following cases: in the event of use that does not comply with the instructions given in this user's manual, faults or damage caused by natural wear, damage resulting from a cause external to the appliance (e.g. impact, fall, exposure to dampness, etc.), noncompliant installation or modifications or repairs carried out by people who are not approved by the manufacturer or retailer.

Warning: never place your telephone in contact with water. To clean your telephone, you may however use a damp soft cloth. Never use solvents (trichlorethylene, acetone, etc.) which may damage the plastic parts of your telephone. Never spray it with cleaning products.
To avoid accidentally damaging the set telephone line connector, make sure you position the cord correctly in the compartment intended for this purpose
The ear piece and microphone area of the handset may attract metallic objects that may be dangerous for the ear.

The wording is not contractual and may be subject to change. Some functions of your telephone are controlled by a software key and the configuration of the unit.

Declaration of compliance
We, Alcatel-Lucent Enterprise, declare that the products covered by this user guide are compliant with the primary requirements of the Parliament and Council Directive 1999/5/CE. A copy of the original of this declaration of compliance can be obtained from your installer.

Consumption in standby: 3,5V.

CE

Information relative to the environment
This symbol indicates that at the end of its life, this product should be subject to special collection and disposal in member countries of the European Union, as well as in Norway and Switzerland. By ensuring this product is disposed of correctly, you will help to conserve natural resources and help prevent potent negative consequences to the environment and human health which could otherwise be caused by inappropriate disposal of this product. For further details about recycling this product, please contact the supplier who sold you the product.

Operating conditions
Operating temperature range: -5°C /45°C.
Acoustic shock protection
The acoustic level of the signal generated by the handset earpiece is less than 130 dBspl for a transient signal (123 dBspl for Australia) and less than 118 dBspl (rms) for a continuou signal (120 dBA for Australia).
Directive 2003/10/EC specifying the risks inherent in noise at work
The ring contributes towards overall daily noise; at its maximum setting, the level is 105 dBA at 60 cm from terminal. To reduce the level, the following is recommended:
- reduce the setting (9 levels of 5 dB)
- program a progressive ring.

Alcatel, Lucent, Alcatel-Lucent and the Alcatel-Lucent logo are trademarks of Alcatel-Lucent. All other trademarks are the property of their respective owners. The information presented is subject to change without notice. Alcatel-Lucent assumes no responsibility for inaccuracies contained herein. Copyright © 2008 Alcatel-Lucent. All rights reserved

MU19008BSAC-E900ed01-0842